OPTIONAL

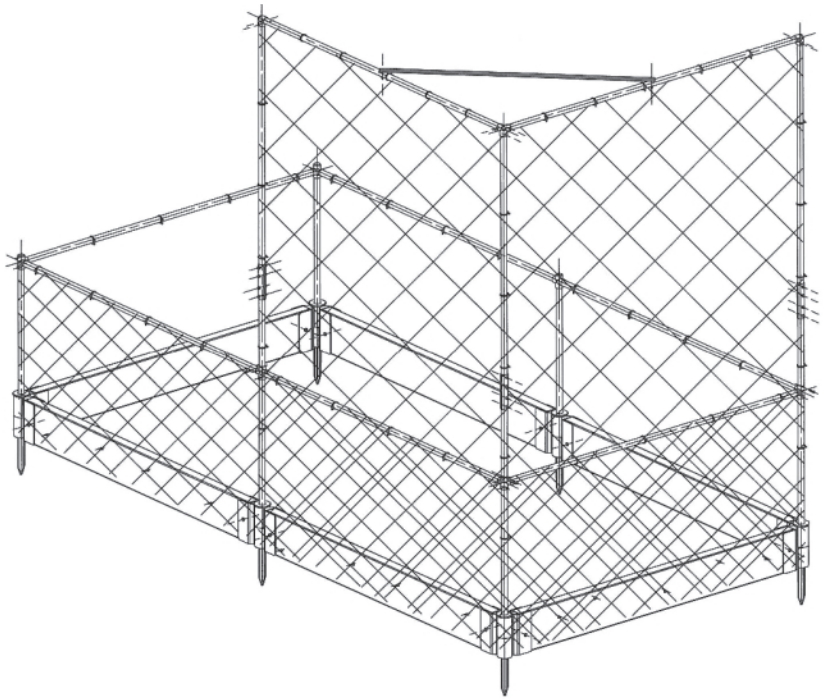

OPTIONAL:
To add a Veggie Wall to the corner of the Small Animal Barrier ,replace the three short vertical tubes (7) with the vertical Veggie Wall tubes and attach with the 2 K connectors (3) and one X connector (4). Line up the connectors to the predrilled holes on the Veggie Wall vertical tubes and fasten with the screws (11).

Manufactured and Distributed by
Scenery Solutions, Inc.
222 Grace Church Street, Suite 302
Port Chester, NY 10573

Questions Call: 800-914-9835
admin@frameitall.com

Printed by China

Small Animal Barrier Kit Instructions

PART LIST

No.	Part No	Description	QTY. (Usage)	QTY. (Backup)
1	S-001	Stake	3	0
2	AS-001	Stake cover	3	0
3	C-004K	K connector	4	0
4	C-005X	X connector	2	0
5	AS-002	Adaptor cap	6	0
6	T-005	Long tube	6	0
7	T-004	Short tube	6	0
8	AS-004	Net	1	0
9	AC-001	Netting nail	42	6
10	AC-002	tie	36	6
11	AC-007	M4X22 screw	18	2

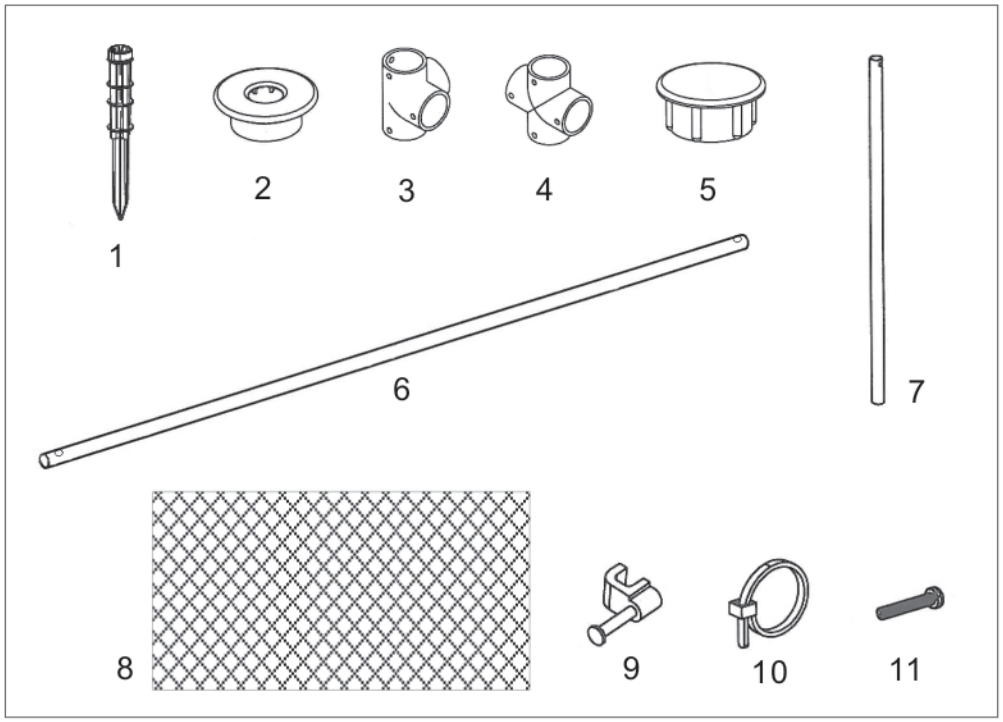

INSTALLATION

Remove all parts from box.

STEP1.
Arrange the six short tubes(7) with the pre-assembled connectors(3, 4) on the ground in the position as shown in diagram. The K connectors(3) go at the four corners of the garden bed. The X connectors(4) go in the middle of the long side of the rectangular garden bed.

STEP 2.
Insert the six long tubes (6) into the pre-assembled connectors. To do this stand the short tubes(7) vertically. Insert the twelve screws(11) into each of six connectors on both sides of the short tubes(7) and tighten to affix the long tubes(6).

STEP 3.
Completely flip over the assembled frame and insert the short tubes(7) into the garden stakes in your 4x8 rectangular garden bed. Insert a black cap(5) into the top of the six connectors.

STEP4.
Open the green net(8) completely. Holding the net in position on the frame (using the tops of the connectors as hooks), affix the net onto the six horizontal tubes. Use four cable ties(10) to the upper horizontal tubes(6) and two ties (10) to the vertical tubes(7). Then affix the net to the timbers of your garden bed using the netting nails(9). Hammer seven nails into each timber. For best results equally space all ties and nails.

STEP1:

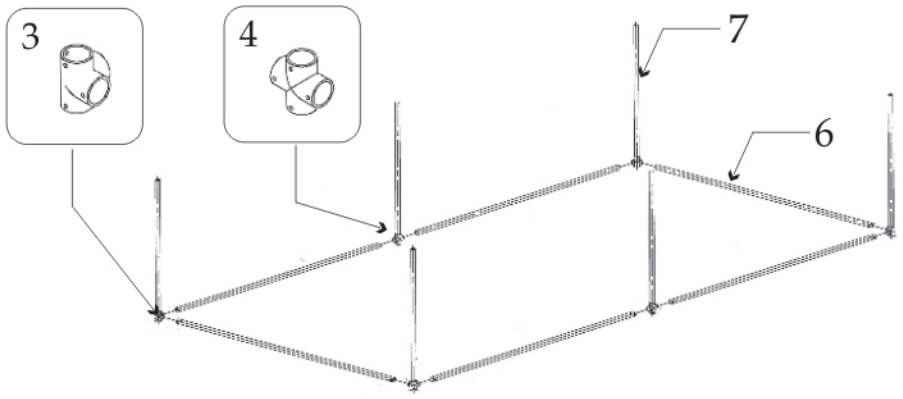

STEP2:

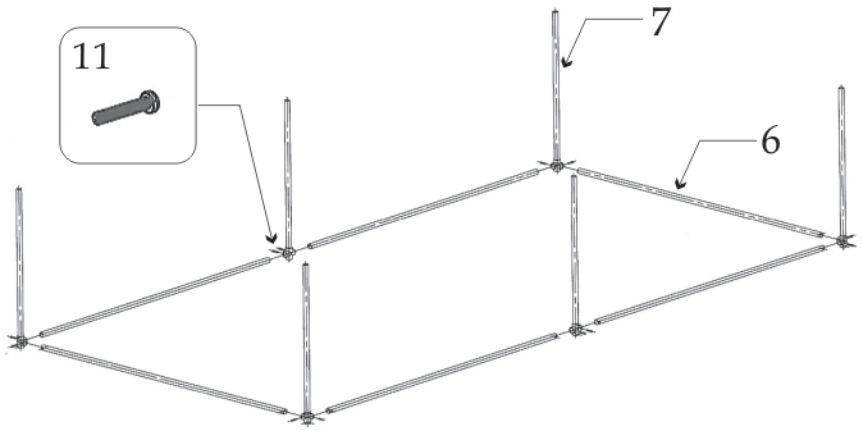

STEP3:

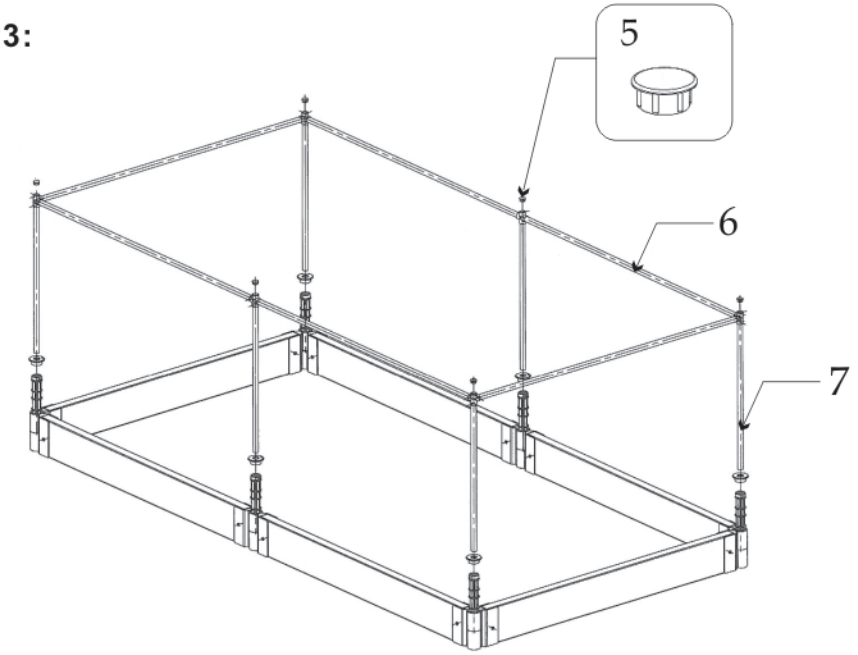
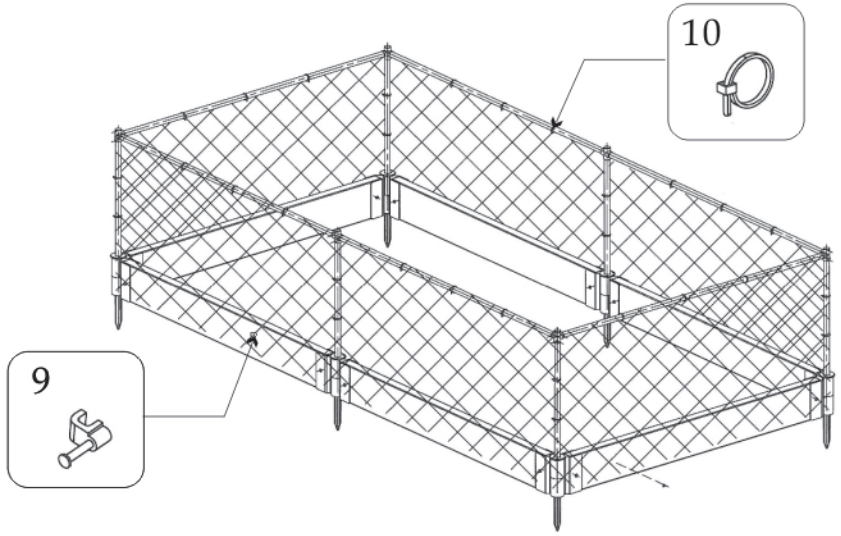
STEP4: